

# **MOMENT**

# MOMENT CAST GROUT COUPLER INSTALLATION GUIDELINES




No.	Instruction	Figure
	Drill a hole on the formwork for the hexagon bolt on the Position Bolt to go through, <i>Figure 1</i> . The hole size would depend on the hexagon bolt used, see Table 1.	
1	Coupler Size Hexagon Bolt Thread Diameter  H12-H16 M10  H20-H25 M12  H32-H40 M16  Table 1: Hexagon Bolt Diameter for Different Coupler Sizes.	Figure 1: Fixing Position Bolt to Formwork.
2	Make sure there are no foreign objects in the grout coupler sleeve. A torch light may help to inspect the interior of the grout coupler sleeve. Use compressed air to blow through to clear debris.	
3	Place the Position Bolt on the formwork, allowing the bolt threads to go through the drilled hole on the formwork. Secure using washer and wing nut.	TILLILLI III
4	Force the grout coupler opening onto the rubber plug on the Position Bolt, as shown in <i>Figure</i> 1. Ensure the coupler edge is flush to the formwork. Tighten wing nut.	Figure 1: Fixing Grout Coupler onto Position Bolt.



# **MOMENT**

5	If using full grout coupler, an additional accessory called End Cap is necessary to be placed to close the grout opening on the rebar side. Before inserting the rebar, cut 'star' shape slots using a blade, the slots on the End Cap as a guide.	
6	Place Clear Hose on the grout coupler valve. A Hose Stopper may also be necessary, as shown in Error! Reference source not found.	Figure 2: Inserting Clear Hose and Hose Stopper.
7	Repeat steps 1 – 6 for other grout couplers. Now casting can begin.	9
8	After casting, remove Hose Stopper.	CG Hose Stopper
9	The Dust Cap can be placed on the grout coupler opening, to prevent dirt and debris from entering the coupler, prior to installation on site.	Hose
10	If using Mass Grouting Method, at least 2 additional hoses needs to be casted into the column. These hoses will be used to pump grout through later on site.	ALLELLILLILLILLILLILLILLILLILLILLILLILLIL

## Site Installation using Mass Grouting Method

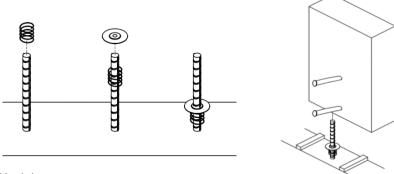

### Disclaimer:

Any technical advice/support or drawings provided by us in whatever form is given to the best of our knowledge and for general use only and shall be considered non-binding information

#### Malaysia Leviat

28, Jin Anggerik Mokara 31/59, Kota Kemuning, 40460 Shah Alam, Selangor Tel.: +603 5122 4182 E-Mail: info.my@leviat.com

#### Singapore Leviat

14 Benoi Crescent Singapore 629977 Tel.: +65 6266 6802 E-Mail: info.sg@leviat.com

#### India Leviat

309, 3<sup>rd</sup> Floor, Orion Business Park, Ghodbunder Road, Kapurbawdi, Thane West, Thane, Maharashtra 400607 Tel.: +91 022 2589 2032 E-Mail: info.in@leviat.com

## Philippines

#17 ADB Avenue, Ortigas Centre, #17 ADB Avenue, Ortigas Center, Pasig City 1605 Tel.: +63 2 7957 6381 E-Mail: info.ph@leviat.com