
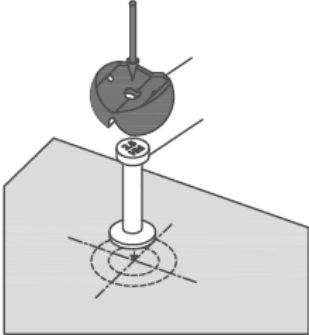
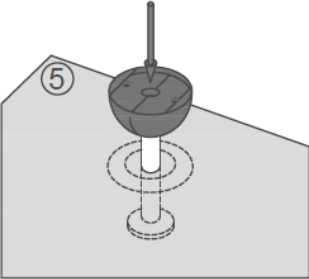
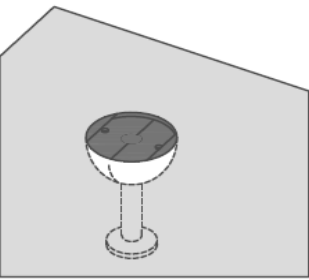
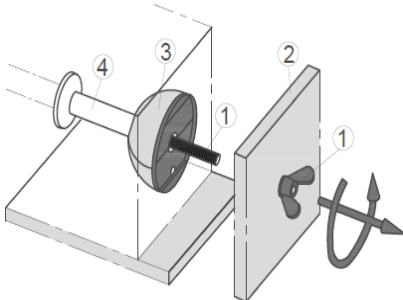
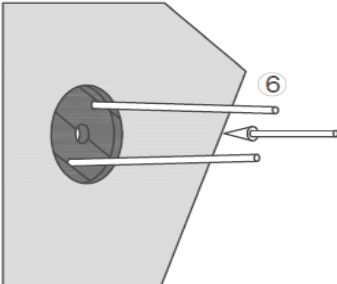
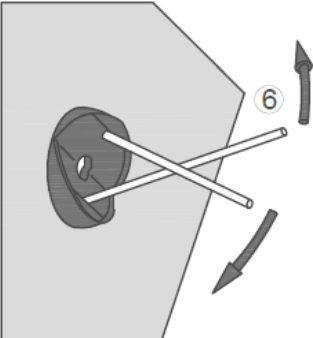




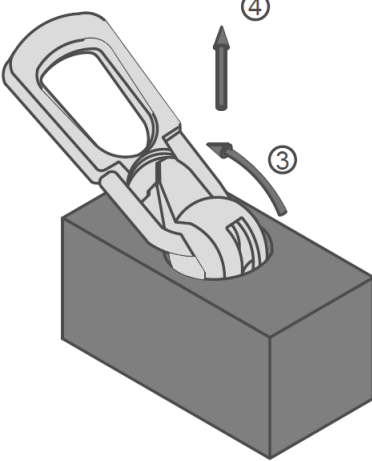
## MOMENT SPHERICAL LIFTING ANCHOR INSTALLATION GUIDELINES

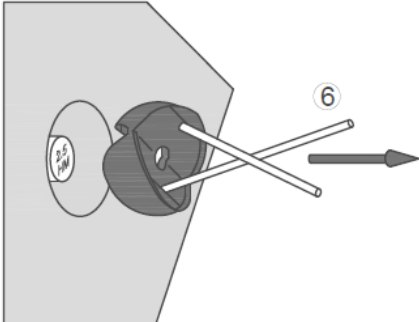


Steps	Instruction	Diagram
1.	<p><b><u>Visual Check</u></b></p> <ul style="list-style-type: none"> <li>Visual check – to identify the correct anchor size &amp; length is used.</li> <li>Make sure there is no damage, dented parts on the anchor.</li> </ul> <p>① Load Class</p> <p>② Manufacturer (Halfen Moment)</p> <p>③ Anchor length [mm]</p>	<p>Diagram 1</p>
2.	<p><b><u>Fixing to formwork</u></b></p> <p>① Fixing component</p> <p>② Formwork</p> <p>③ Recess former</p> <p>④ MOMENT Spherical Anchor</p>	<p>Diagram 2</p>

Steps	Instruction	Diagram
3.	<p><b><u>Fixing from above into fresh concrete</u></b></p> <ul style="list-style-type: none"> <li>• Installation can be fixed from above into fresh concrete after casting</li> <li>• The recess former together with the pre-assembled MOMENT Spherical Anchor inserted at the specified position, by pressing and agitating, until the top edge of the recess former is flush with the concrete surface.</li> <li>• Formwork oil can be used to recess former at contact with concrete surface to facilitate the stripping of the formwork. This will help to prolong the durability of the recess former.</li> </ul> <p>⑤ Fresh concrete</p>	 <p>Diagram 3.1</p>  <p>Diagram 3.2</p>  <p>Diagram 3.3</p>

Steps	Instruction	Diagram
4.	<p><b><u>Removing rubber recess</u></b></p> <p>⑥ Auxiliary tool, i.e. Reinforcement bar</p>	 <p>Diagram 4.1</p>  <p>Diagram 4.2</p>  <p>Diagram 4.3</p>  <p>Diagram 4.4</p>

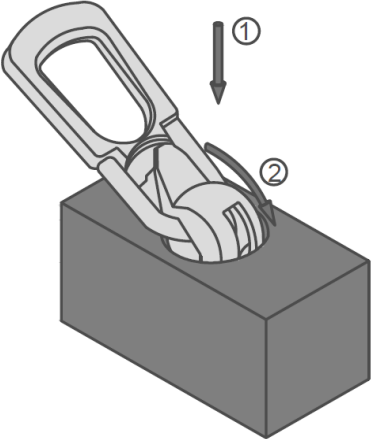Steps	Instruction	Diagram
1.	<p><b><u>Engage Lifting Link to the Anchor Head</u></b></p> <p>① To engage: Face the opening of the clutch over the anchor head.</p> <p>② Turn the tongue of the clutch away from the lifting link as per arrow shown.</p> <p>The lifting clutch is now secured and ready to be used.</p>	 <p>Diagram 1</p> 
2.	<p><b><u>Dis-engage Lifting Link from the Anchor Head</u></b></p> <p>③ Lower the lifting head and swivel the clutch</p> <p>④ Lift the lifting head upward</p>	 <p>Diagram 2</p>

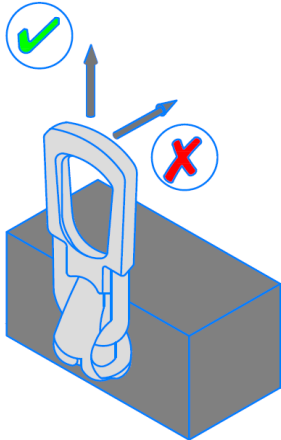Steps	Instruction	Diagram
3.	<p><b><u>Lifting – Do and Don't</u></b></p> <p>Do not lift against the concrete surface</p>	 <p>Diagram 3</p>

**Disclaimer:**

Any technical advice/support or drawings provided by us in whatever form is given to the best of our knowledge and for general use only and shall be considered non-binding information.

**Malaysia**  
**Leviat**  
28, Jln Anggerik Mokara 31/59, Kota  
Kemuning, 40460 Shah Alam,  
Selangor  
Tel.: +603 5122 4182  
E-Mail: [info.my@leviat.com](mailto:info.my@leviat.com)

**Singapore**  
**Leviat**  
14 Benoi Crescent  
Singapore  
629977  
Tel.: +65 6266 6802  
E-Mail: [info.sg@leviat.com](mailto:info.sg@leviat.com)

**India**  
**Leviat**  
309, 3<sup>rd</sup> Floor, Orion Business Park,  
Ghodbunder Road, Kapurbawdi, Thane  
West, Thane, Maharashtra 400607  
Tel.: +91 022 2589 2032  
E-Mail: [info.in@leviat.com](mailto:info.in@leviat.com)

**Philippines**  
**Leviat**  
U-2933 Regus, Joy Nostalg Centre,  
#17 ADB Avenue, Ortigas Center,  
Pasig City 1605  
Tel.: +63 2 7957 6381  
E-Mail: [info.ph@leviat.com](mailto:info.ph@leviat.com)