
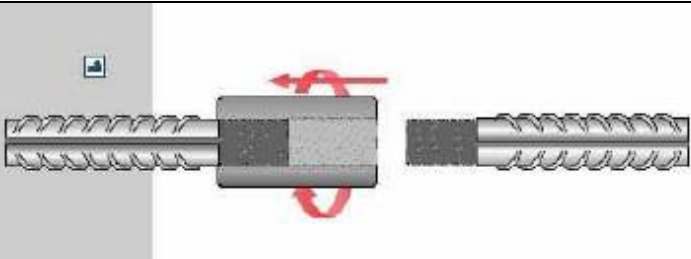
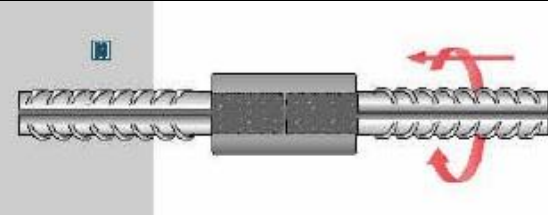
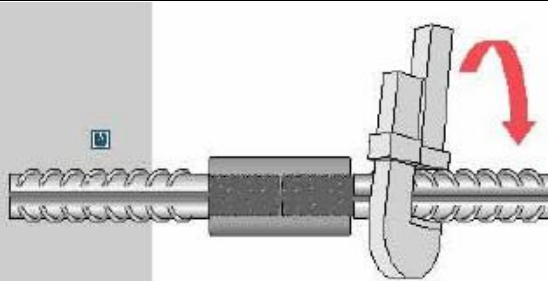


## MOMENT ROLLTEC (RT COUPLER) INSTALLATION GUIDELINES



Steps	Instruction	Diagram
1.	The couplers are to be hand tighten & <b><u>IN CASE OF SLIGHT RUSTY, A PIPE WRENCH COULD BE USED TO TIGHTEN.</u></b>	
2.	Turn coupler fully into one end of threaded bar.	
3.	Engage incoming bar to opposing end of coupler.	
4.	Rotate incoming bar using a wrench until full tightness only when necessary.	

**Disclaimer:**

Any technical advice/support or drawings provided by us in whatever form is given to the best of our knowledge and for general use only and shall be considered non-binding information.

**Malaysia**

**Leviat**

28, Jln Anggerik Mokara 31/59, Kota  
Kemuning, 40460 Shah Alam,  
Selangor  
Tel.: +603 5122 4182  
E-Mail: [info.my@leviat.com](mailto:info.my@leviat.com)

**Singapore**

**Leviat**

14 Benoi Crescent  
Singapore  
629977  
Tel.: +65 6266 6802  
E-Mail: [info.sg@leviat.com](mailto:info.sg@leviat.com)

**India**

**Leviat**

309, 3<sup>rd</sup> Floor, Orion Business Park,  
Ghodbunder Road, Kapurbawdi, Thane  
West, Thane, Maharashtra 400607  
Tel.: +91 022 2589 2032  
E-Mail: [info.in@leviat.com](mailto:info.in@leviat.com)

**Philippines**

**Leviat**

U-2933 Regus, Joy Nostalg Centre,  
#17 ADB Avenue, Ortigas Center,  
Pasig City 1605  
Tel.: +63 2 7957 6381  
E-Mail: [info.ph@leviat.com](mailto:info.ph@leviat.com)