
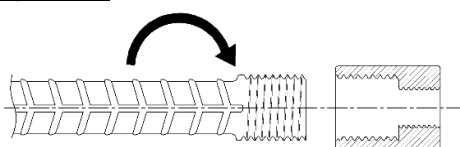
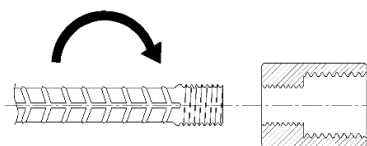
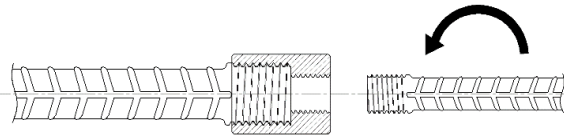
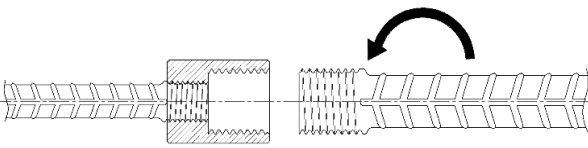
 
 


MOMENT REDUCER JT COUPLER – TYPE A INSTALLATION GUIDELINES



Steps	Instruction	Diagram
1.	The couplers are to be hand tighten & <u>IN CASE OF SLIGHT RUST, A PIPE WRENCH COULD BE USED TO TIGHTEN.</u>	
2.	Engaged onto thread end and forwarded until the end of the thread.	<p><u>Option 1</u></p>  <p><u>Option 2</u></p> 
3.	Make sure the thread is engaged firmly to the coupler. Then engaged incoming rebar which smaller to the coupler.	<p><u>Option 1</u></p>  <p><u>Option 2</u></p> 

Steps	Instruction	Diagram
4.	<p>Make sure the thread is engaged firmly to the coupler.</p> <p>Note: Our standard method is Option 1</p>	<p><u>Option 1</u></p>  <p><u>Option 2</u></p> 

Disclaimer:

Any technical advice/support or drawings provided by us in whatever form is given to the best of our knowledge and for general use only and shall be considered non-binding information.

Malaysia
Leviat

28, Jln Anggerik Mokara 31/59, Kota
Kemuning, 40460 Shah Alam,
Selangor
Tel.: +603 5122 4182
E-Mail: info.my@leviat.com

Singapore
Leviat

14 Benoi Crescent
Singapore
629977
Tel.: +65 6266 6802
E-Mail: info.sg@leviat.com

India
Leviat

309, 3rd Floor, Orion Business Park,
Ghodbunder Road, Kapurbawdi, Thane
West, Thane, Maharashtra 400607
Tel.: +91 022 2589 2032
E-Mail: info.in@leviat.com

Philippines
Leviat

U-2933 Regus, Joy Nostalg Centre,
#17 ADB Avenue, Ortigas Center,
Pasig City 1605
Tel.: +63 2 7957 6381
E-Mail: info.ph@leviat.com