
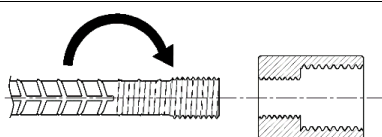
 
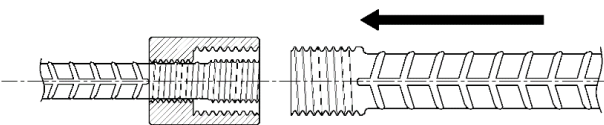
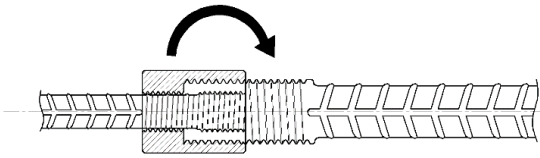
 


## MOMENT REDUCER JT COUPLER – TYPE B INSTALLATION GUIDELINES



Steps	Instruction	Diagram
1.	The couplers are to be hand tighten & <b><u>IN CASE OF SLIGHT RUST, A PIPE WRENCH COULD BE USED TO TIGHTEN.</u></b>	
2.	Engaged onto thread end and forwarded until the end of the thread. Smaller rebar is recommended to be full thread.	
3.	Make sure the thread is engaged firmly to the coupler.	
4.	Then engaged incoming rebar which bigger to the coupler.	
5.	Rotate the coupler into the bigger rebar to fix it up.	
6.	Make sure the thread is engaged firmly to the coupler.	

**Disclaimer:**

Any technical advice/support or drawings provided by us in whatever form is given to the best of our knowledge and for general use only and shall be considered non-binding information.

**Malaysia**

**Leviat**

28, Jln Anggerik Mokara 31/59, Kota  
Kemuning, 40460 Shah Alam,  
Selangor  
Tel.: +603 5122 4182  
E-Mail: info.my@leviat.com

**Singapore**

**Leviat**

14 Benoi Crescent  
Singapore  
629977  
Tel.: +65 6266 6802  
E-Mail: info.sg@leviat.com

**India**

**Leviat**

309, 3<sup>rd</sup> Floor, Orion Business Park,  
Ghodbunder Road, Kapurbawdi, Thane  
West, Thane, Maharashtra 400607  
Tel.: +91 022 2589 2032  
E-Mail: info.in@leviat.com

**Philippines**

**Leviat**

U-2933 Regus, Joy Nostalg Centre,  
#17 ADB Avenue, Ortigas Center,  
Pasig City 1605  
Tel.: +63 2 7957 6381  
E-Mail: info.ph@leviat.com